








Tools You'll Need

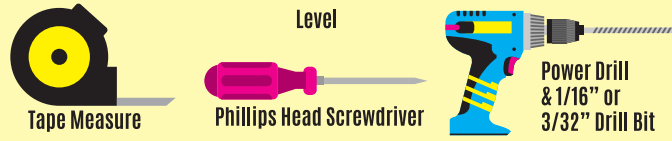

Hardware

-  (3) #6 1/4" Screws
-  (2) D-Rings
-  (3) Drywall Screws
-  (3) Plastic Wall Anchors
-  (1) Self Drilling Screw
-  (1) "L" Bracket


Step 1

Lay the board face down on a soft, protected surface. The hangers are to be fastened to the side or vertical rail of the framing.

Step 2


Measure down from the top of the board to 2" & drill a pilot hole with your 1/16" or 3/32" drill bit. Be careful to measure down the same distance on the opposite side vertical framing.

Use tape measure to measure down from the **TOP** of the board 2" on both sides

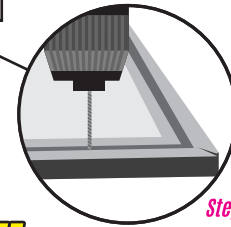

Step 2

NOTE: The pilot hole is to establish the distance from the top of the board to ensure that it hangs level.

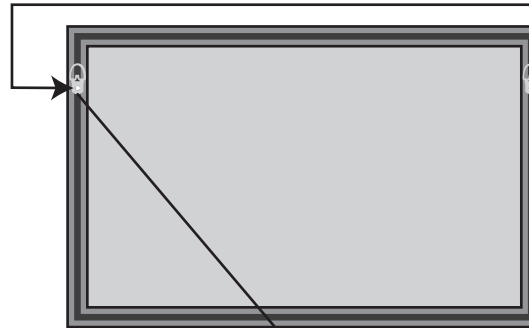

Step 3

Step 3

Using the 1/4" long screws, fasten the D-ring hanger to the aluminum frame with a Phillips head screwdriver or screw gun.

Step 4

Determine the height of the board by using a level draw a level line on the wall. The line should be long enough to accommodate both D-Rings. Measure the peak of the D-Rings & make 2 marks on the level line to represent the distance between the top of the two D-Rings.

Step 5

Install both drywall screws through the drywall & into the stud or use plastic anchor, then hang the board on the screws. Adjust screws to allow the board to slide over the screw & sit snug to the wall.


Step 6

Mark the bottom of the board for the position of the bottom bracket, approximately in the center of the board. Then remove board to install bracket.


Step 7

Install bracket to wall with the screw at the bottom of the vertical slot.

Step 7
Put the screw in the bottom of the slot

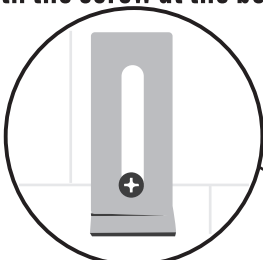

Step 8
Use self drilling screw to fasten the bracket to the bottom of the board

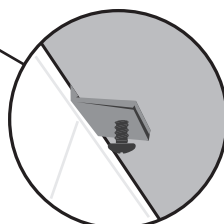

Step 8

Rehang the board & fasten the bottom of the board to the bracket with the self drilling screw



Hang the D-Rings on the screws or hooks in the wall

Step 5